



If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.

Note:

- For spring lock mechanism to operate properly, the spade end **MUST** be installed in the vertical position.
- All springs supplied are wound in one direction only. To tension spring, the spade is turned in the clockwise direction.
- Standard/ under roll blinds – the spade end bracket **MUST** be installed on the **LEFT** side.
- Over roll blinds – the spade end bracket **MUST** be installed on the **RIGHT** side.



1. Face Fix

- Pin end bracket – move the grey plastic grommet from the centre position to the top position.

Note: the photos shown are for a standard roll blind. If the blind is over rolled, then the pin end bracket is on the left.

- Install the brackets
- Insert the pin end first, then drop the spade end into the top slot of the spade bracket



2. Recess /Top Fix

- Pin End bracket - ensure that the grey plastic grommet is in the middle hole.

Note: the photos shown are for a standard roll blind. If the blind is over rolled, then the pin end bracket is on the left.

- Install the brackets
- Insert the pin end first, then drop the spade end into the top slot of the spade bracket



3. Adjusting the Spring Tension

The blinds are pre-tensioned when supplied. If additional tension is required, there are 2 ways to do this (depending on the situation, one may be easier/better than the other)

- Make sure the spring lock is latched. Remove the blind. Orientate the spade in the vertical position. Wind the spring in the clock wise direction using an adjustable spanner. Make sure that the spring mechanism is latched before releasing the spanner. Attach blind in to the brackets, and test the tension.
- Pull the blind a third of the way down and latch the blind. Carefully remove the blind and roll up the fabric. Reattach the blind onto the brackets and test the tension.

Note: If the spring is over tensioned, release the spring tension totally using an adjustable spanner. Orientate the spade end in a horizontal position (this will prevent the lock mechanism from engaging), turn the spade slightly clockwise and release. Be aware that the spring will unwind in a hurry. Normally the blind is pre-set with 5-6 rotations.