

Fitting Instructions for Cedar, Timber Style & Jarrah Image Blinds

If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets. The screws supplied are suitable for wood or MDF only.

Caution: Some new houses use MDF architraves that are glued and pinned only to the plasterboard. It may be prudent to secure the architrave to the timber stud before fixing the blind to the architrave.



Install the Brackets

Remove the End brackets and identify which is left and right hand. They are identified by the letters LH and RH stamped on the brackets. These brackets need to be positioned to support each end of the head rail. Secure the brackets into place with screws appropriate to the surface.

For **Face Fit** blinds use the holes at the back of the bracket.

For **Recess blind** use the holes at the top of the bracket.

If one or more Intermediate brackets are supplied, position them evenly between the End brackets making sure they line up the End brackets. Make sure the position of the Intermediate bracket does not interfere with the ladders of the blind. Secure in the same fashion as the End brackets.

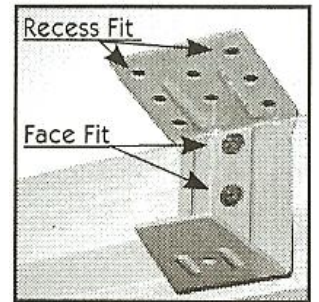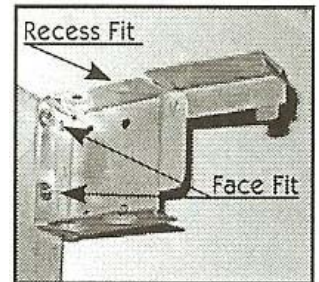

Fit the blinds into the Brackets





Open the bracket gates on the End brackets. Slide the head rail into the brackets.

Close the bracket gates to secure to blind.

Note: Make sure that the blades are in the 'OPEN' position when the blind is being raised or lowered. Failure to do so may cause damage to the blind or restrict its operation.

Attach the fascia

If the fascia has returns that are not attached, clip them on using the clips on the back of the fascias. If hang clips are not attached (Timber Style, Jarrah Image Face Fit), insert them into the groove running parallel to the length of the fascia. Press firmly and rotate to the correct position. Hang the fascia on the head rail using the hanging clips at the back.

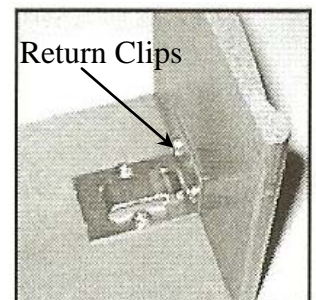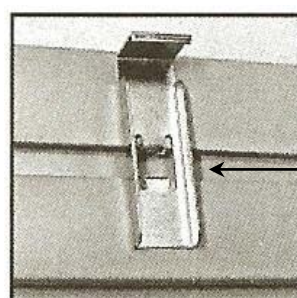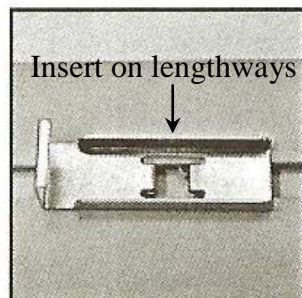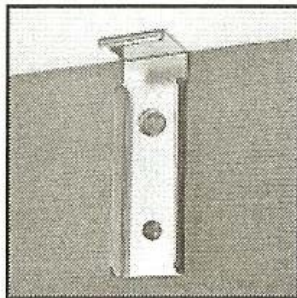

Twist to correct position

How to install the Cord Cleat

The Cord Cleat is used to tie excess cords out of the reach of children. To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220 mm or longer at a height of less than 1600 mm above floor level – to prevent a child from unwinding a cord from a cleat.

1. Position the Cleat against the window frame in a place that is accessible to the user while remaining inaccessible to small children.
2. Use a drill to fasten the Cleat with the two screws provided.

This device will not prevent strangulation if young children wrap pull cords around their necks.

WARNING

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove this label

