



## Preparations before you Install

Remove the packaging and ensure that the fascia is correct and in good condition.


Below are the fascia dimensions, parts that come with the fascia and the number of brackets for the size of the Fascia.

Dimensions	<ul style="list-style-type: none"> <li>Single Fascia = 6 mm thick x 130 mm Face drop</li> <li>Double Fascia = 6 mm thick x 180 mm Face drop</li> <li>Extended double Fascia = 6mm thick x 250mm Face drop</li> </ul>	Number of brackets per Fascia	
		Fascia Width	No. of Brackets
Parts	<ul style="list-style-type: none"> <li>OBM <math>\pm</math> 2mm</li> </ul>	0—1000mm	2
		1001—2000mm	3
	<ul style="list-style-type: none"> <li>Screw (8 gauge 3/8") with M6 washer— 2 sets per bracket</li> <li>L - Bracket Mild steel – 50 x 75 x 3mm</li> <li>Counter sunk screws (6 x 5/8") – 2 screws per bracket</li> </ul>	2001—3000mm	4
		3001—4000mm	5
		4001—4480mm	6

Inspect the area to install the fascia, and determine the position of the brackets. The brackets will be top fixed to the window frame.

## Installation:

1. Attach brackets to top edge, at the back of the fascia. Space out the brackets evenly to give reasonable support to the fascia. Use the small short screws with 1 washer per screw. This will ensure that the screw will not come through the fascia board.
2. Place the fascia just inside the window frame and top fix the brackets with the countersunk screws provided.

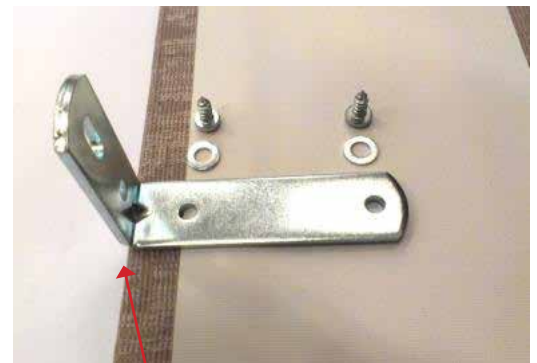

Line up bracket to top edge of Fascia